


Datasheet PA0190 Junction box

2.4.5 Drawing and description of PA0190

Junction box that splits the connects the signals in the **MAC00-Ex4 I** “I/O” connector into 4 individual connectors giving an easy and more flexible installation.

Usage hints: The LED's will only work with MIS/MIL or MAC motors where the OUT+ and IO- is supplied from the Ethernet module. See also the I/O description for the module.

If a cable is connected to the “BYPASS” then the Communication pins and GND must be properly connected to valid signals (pins 2, 15, 17). AND “COM” must not be used. In other words use EITHER the “BYPASS” OR the “COM” connector. Not both.

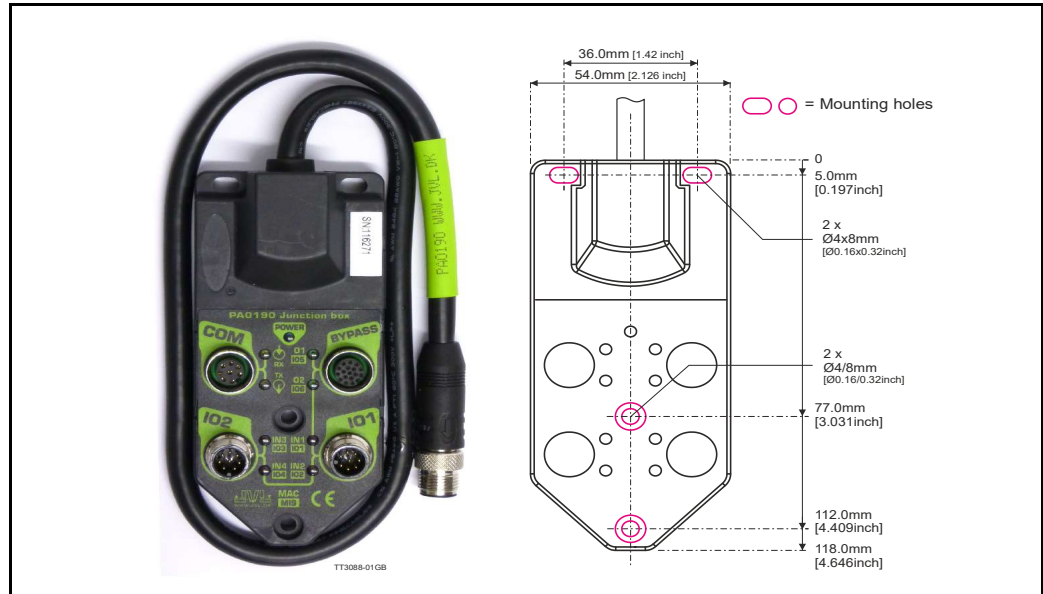

Datasheet PA0190 Junction box

Terminal and LED description of the PA0190 Junction box.

