

# Using Kinco HMIs with MAC motor<sup>®</sup> & ServoStep<sup>®</sup> & SMC66..85

After installing the HMIware software and the correct USB-driver, you are ready for creating and downloading projects to your Kinco HMI panels.

In this short Quick Start Manual the following points are covered:

## 1. Creating a new project

- One HMI and One ServoStep<sup>®</sup> or MAC motor<sup>®</sup>
- One HMI and Multiple ServoStep<sup>®</sup>s or MAC motor<sup>®</sup>s
- Multiple HMIs and Multiple ServoStep<sup>®</sup>s or MAC motor<sup>®</sup>s

## 2. Designing HMI screens – Register Types

- Mix of 16 bit and 32 bit (MAC 50..141 + SMC75/1<sup>st</sup> Gen. MIS23x)
- Only 32 bit (MAC 400..3000 + SMC66/MIS17x/MIS23x(2<sup>nd</sup> Gen) + SMC85/MIS34x..)

## 3. Placing different Controls on the Screens


- Text
- Number Inputs
- Number Display
- Function Keys

## 4. Save the Project and Download it to the HMI

- Save the Project
- Compile the Project
- Simulation and Download to the HMI


## 1. Creating a new project

File – New:

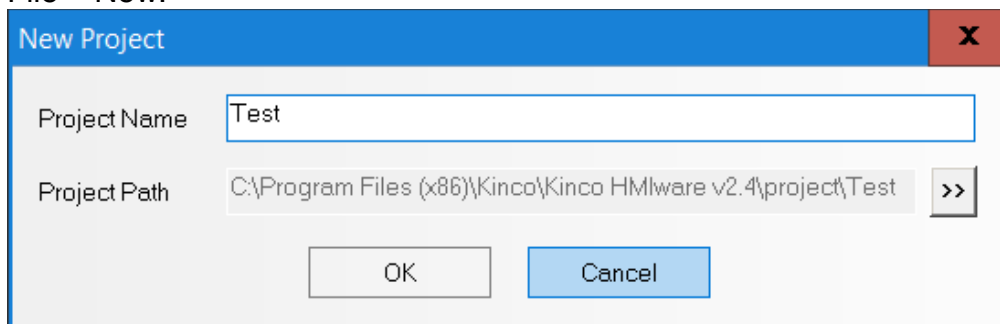


Choose a Project Name and click <OK>.


Now drag the relevant HMI unit onto the grey canvass grid:

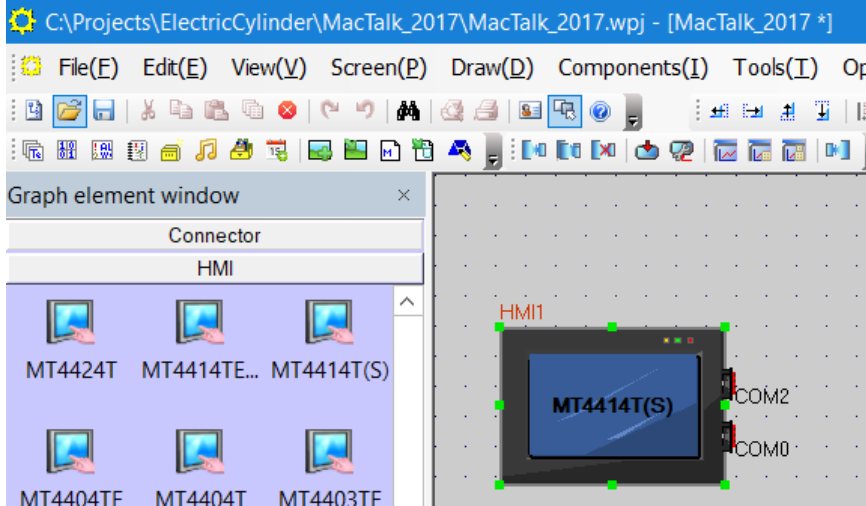


Next drag the PLC type “MAC Motor” to the grid:

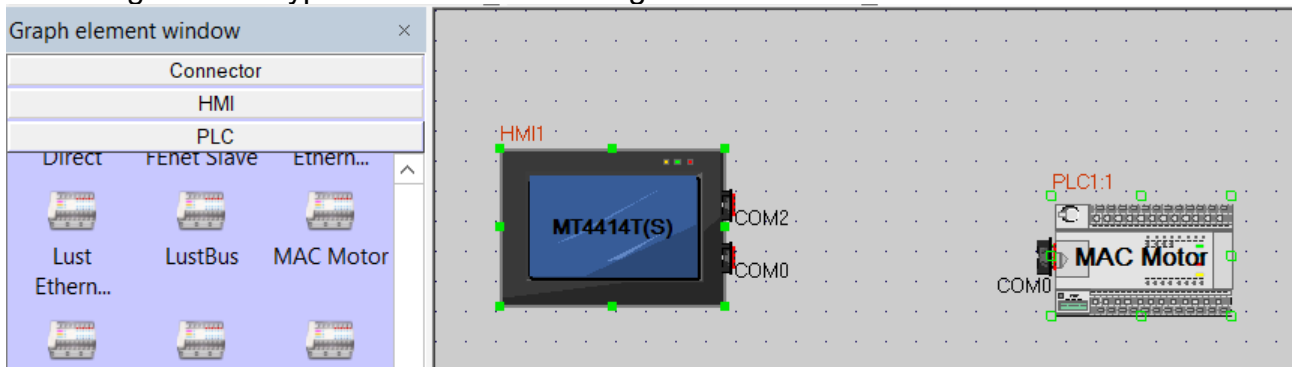

Drag the Connector type “Serial Port” to the grid and connect the ends to the HMI Com0 port respectively to the MAC Motor (covers MAC motor®, ServoStep® and SMC66..85):

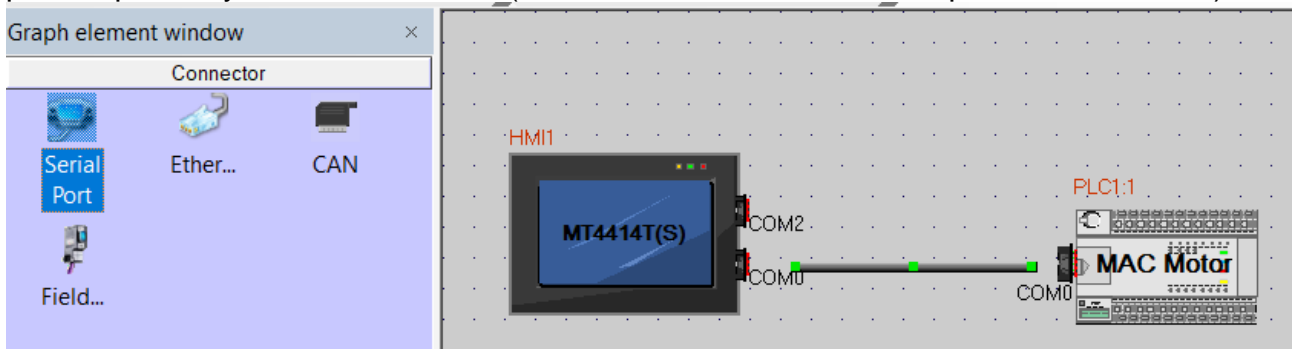


Now make sure that the Serial Port connector is connected in BOTH ends:

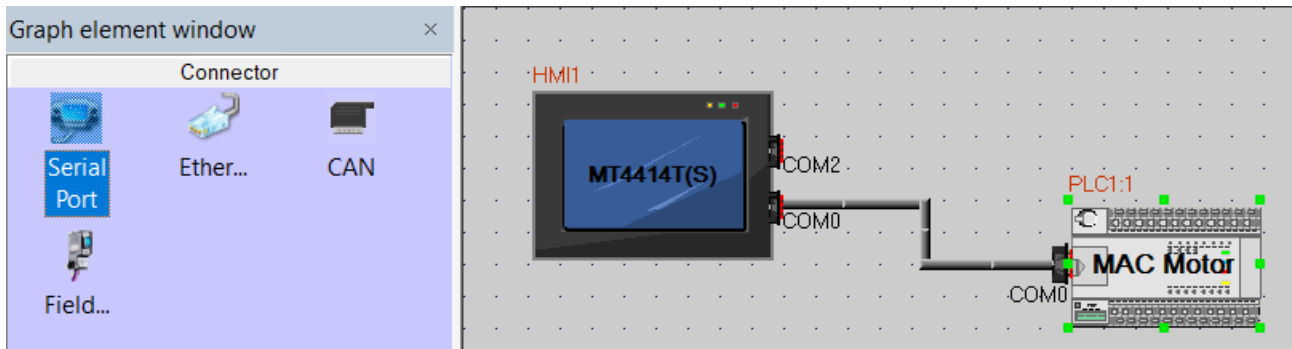


*Tip: if you move HMI up-and-down and PLC up-and-down, then the connector MUST follow (as shown) otherwise it is not connected in both ends.*


### 1 pcs HMI + 1 pcs ServoStep® / MAC motor®

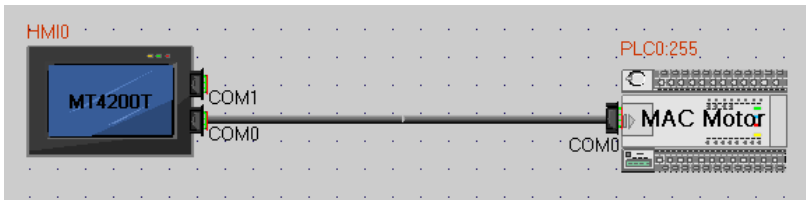

### 1 pcs HMI + Multiple ServoStep®s or MAC motor®s

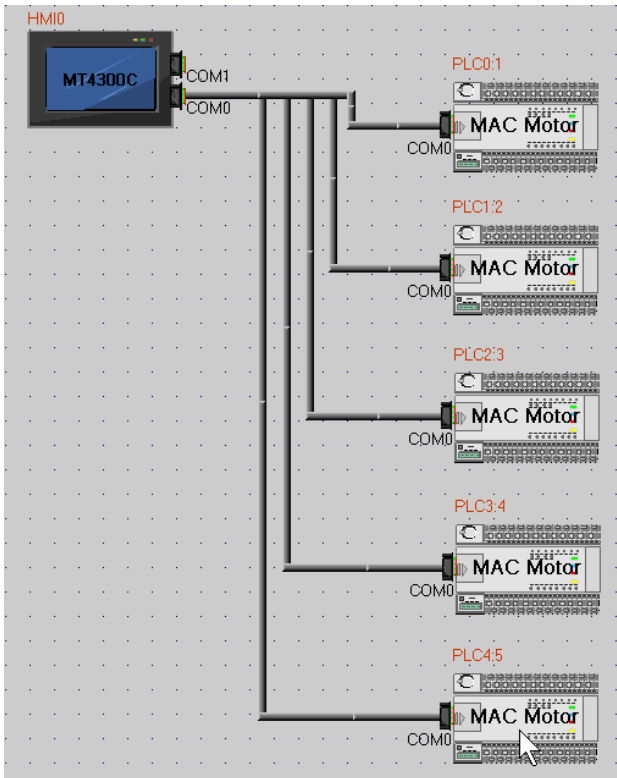


### Multiple HMIs and Multiple ServoStep®s or MAC motor®s

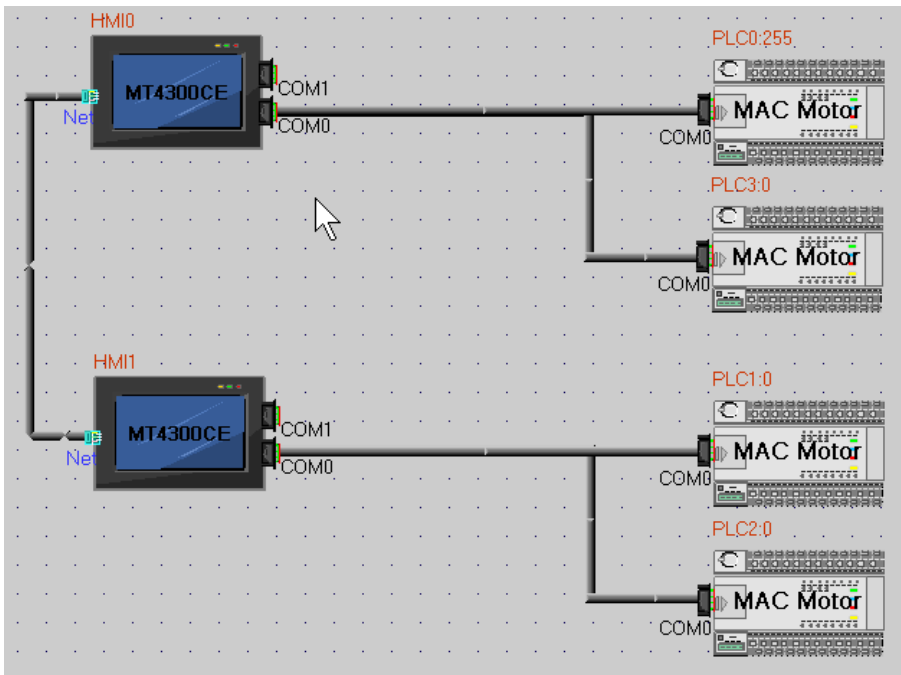


## Now setup the parameters

After creating the project – first check that the PLC = “MAC Motor” in Kinco software and the MAC motor or ServoStep motor have the same addresses. See below how to setup address in JVL’s MacTalk software.


MAC motor = “PLC” must have an Address No. in the range 1...254 (i.e. NOT 0 = zero).

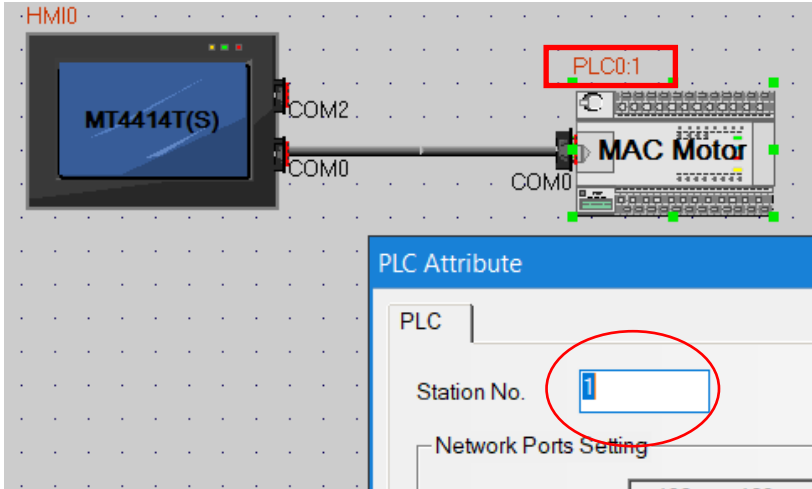

In MacTalk® (1) key in the address on the Main tab, (2) press Enter and (3) click “Save in motor”:

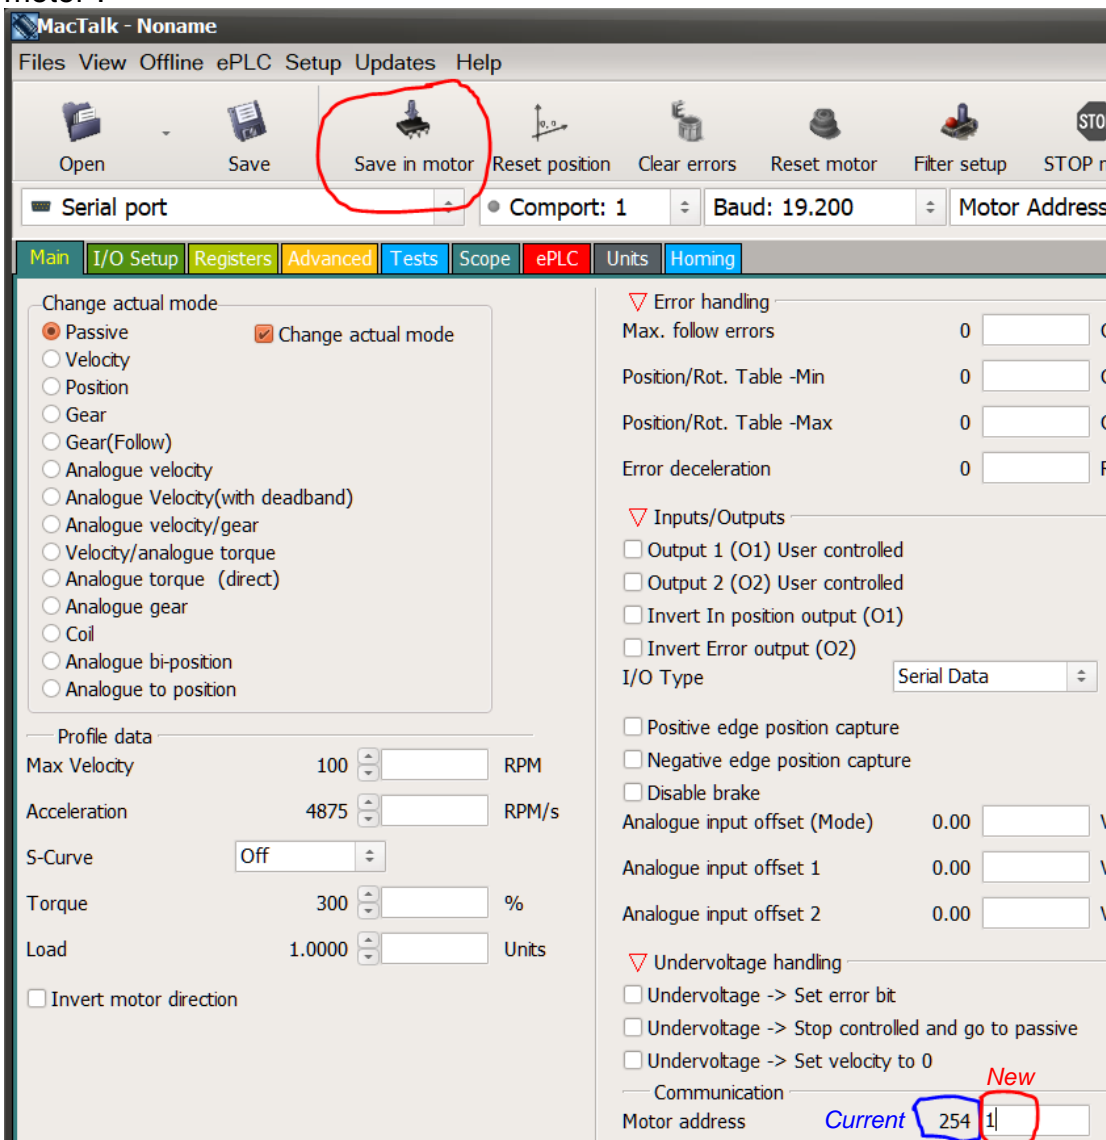

Next set the “Serial Port 0 Setting” Type to either RS232 or **RS485-2**.  
For ServoStep® and SMC66..85 you have to always select **only RS485-2**.  
Using the **WI0060** cable provided by JVL (HMI RS485 Cable 5m, MAC-R4 +MIS +SMC)  
you have to **select RS485-2**.

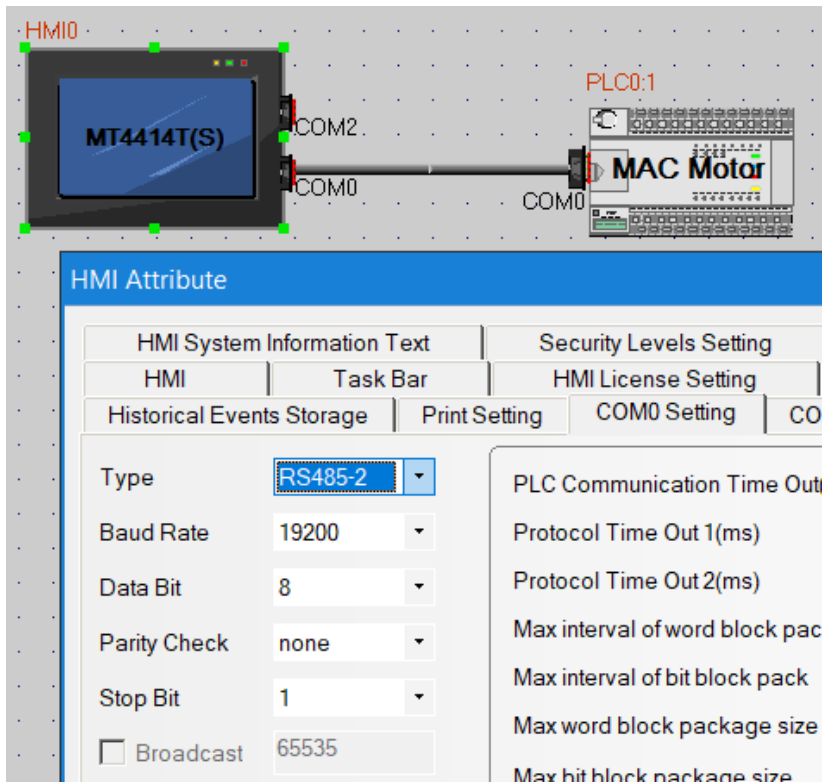

Keep values for ‘Baud Rate’ (19200), ‘Data Bit’ (8), ‘Parity’ (none) and ‘Stop Bit’ (1), and leave all other values un-changed unless you have a specific reason to change them.

On next page you can see how to design HMI screens...

## 2. Designing HMI screens – Register Types

Before placing control elements on the screen which refer to Registers in the motor, you need to be aware that you must choose **Addr. Type** as either **W\_Reg** or **DW\_Reg**.


MAC 50..141 (1<sup>st</sup>+2<sup>nd</sup> Gen.) + MIS 23x (1<sup>st</sup> Gen)/SMC75: mix of 16 bit and 32 bit registers.

MAC400..3000, MIS17x..23x..34x..43x / SMC66/85: always ONLY 32 bit registers.


If it's a **16 bit** motor register use **W\_Reg**. (MAC 50..141 + MIS 23x + SMC75).

If it's a **32 bit** motor register use **DW\_Reg**. (MAC400+, MIS34x and SMC66/85).

Example of **16 bit** Number input in MIS23x (Set Speed):

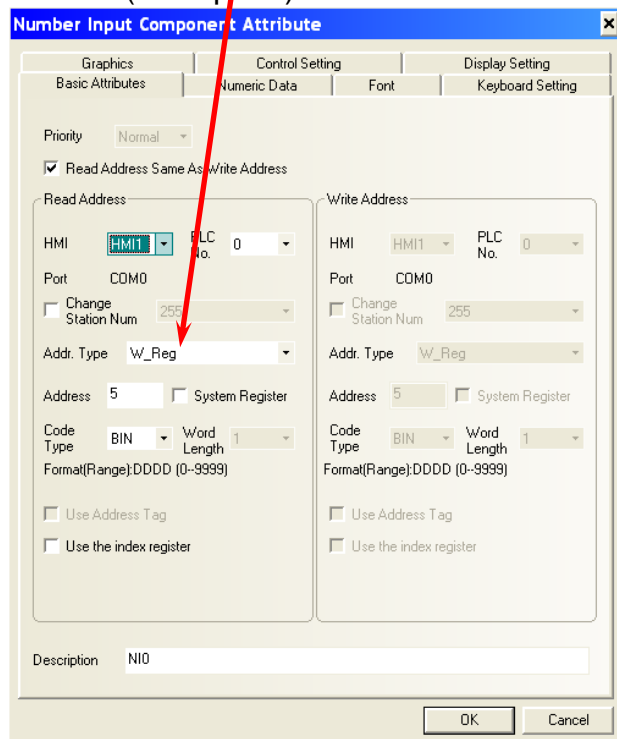

Example of **32 bit** Number display (Actual Position):

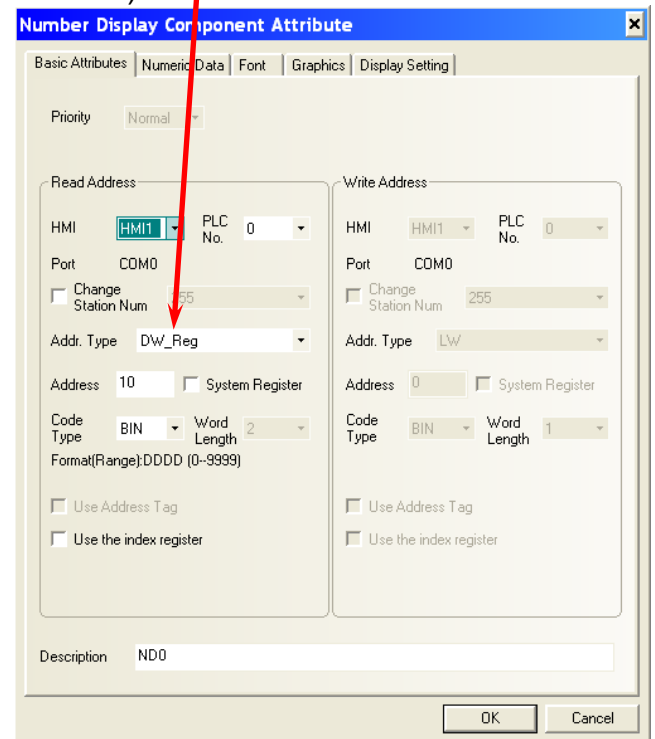


## 3. Placing different Controls on the Screens


### Text

Using the Text tool ("A") key in the desired text:

 n(O) Window(W) He




Choosing "Graphics Mode" and "Vector Font" you can specify the Font, color and size etc:


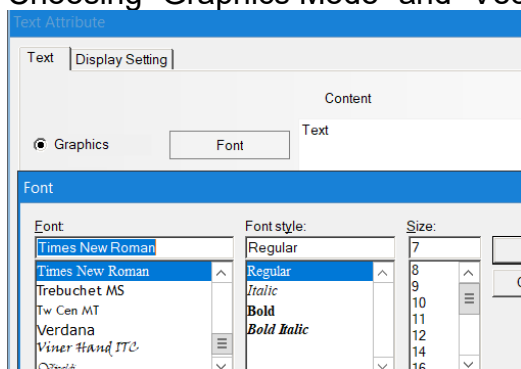


## Number Input


Now place a Number Input on the screen – in this example the Set Position:

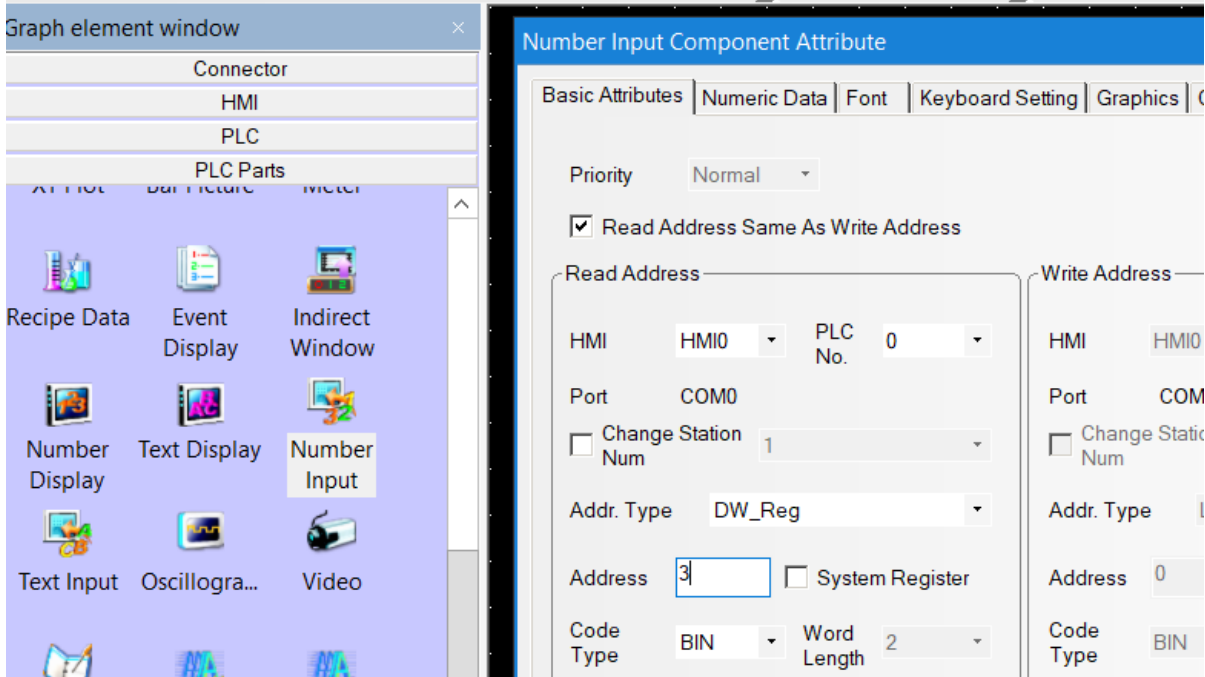


And it can look like this:

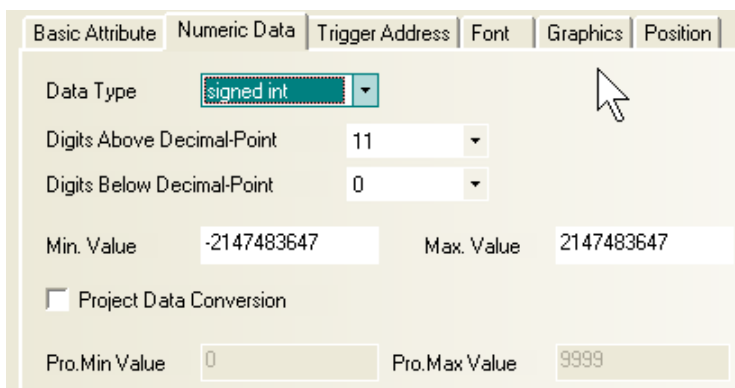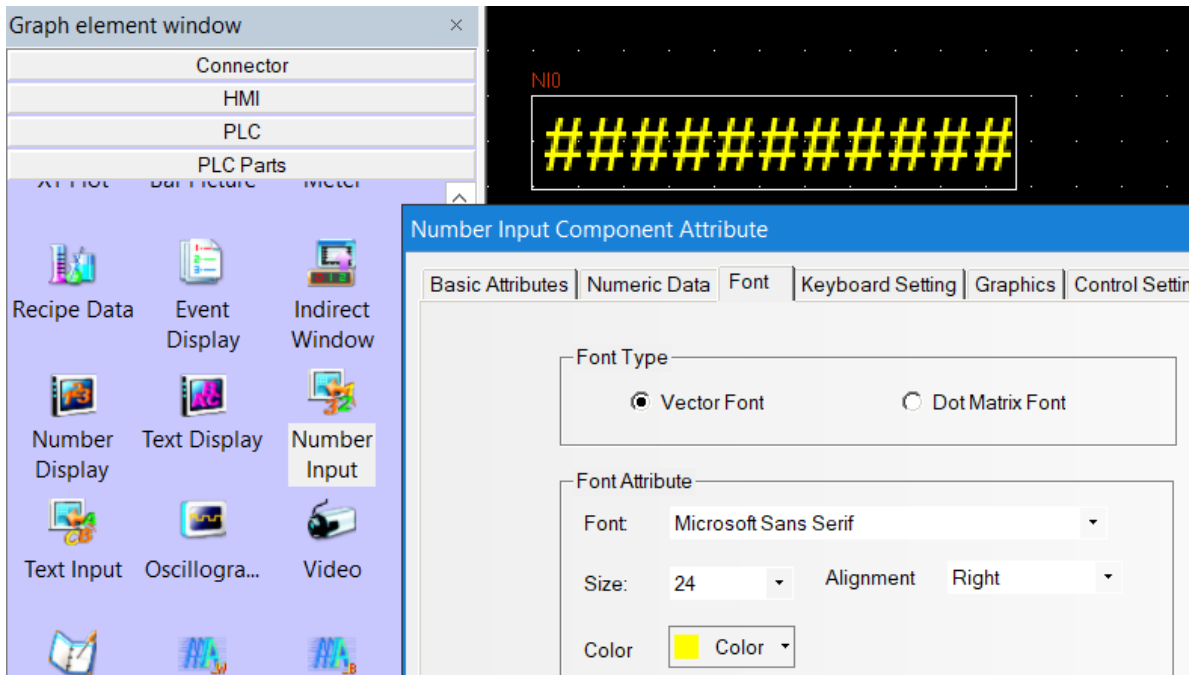

Next place a Number Display on the screen – in this example the Actual Position:

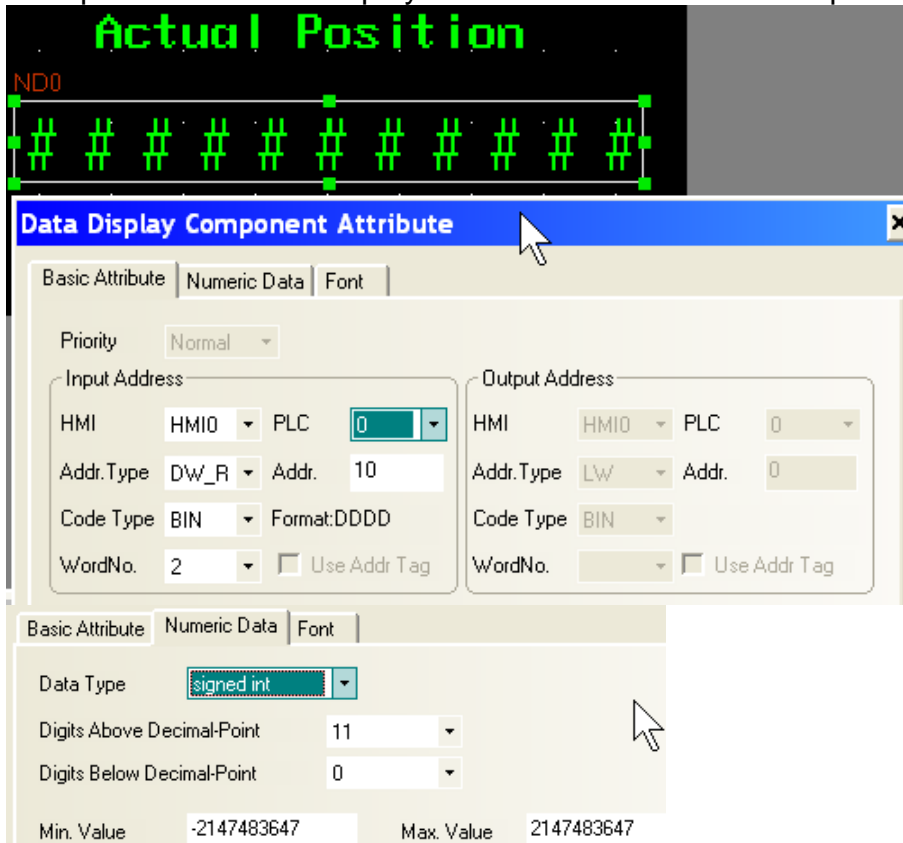

Finally place a Function Key on the screen – in this example a STOP key used for stopping a running motor (by loading the Velocity register (# 5) with 0):

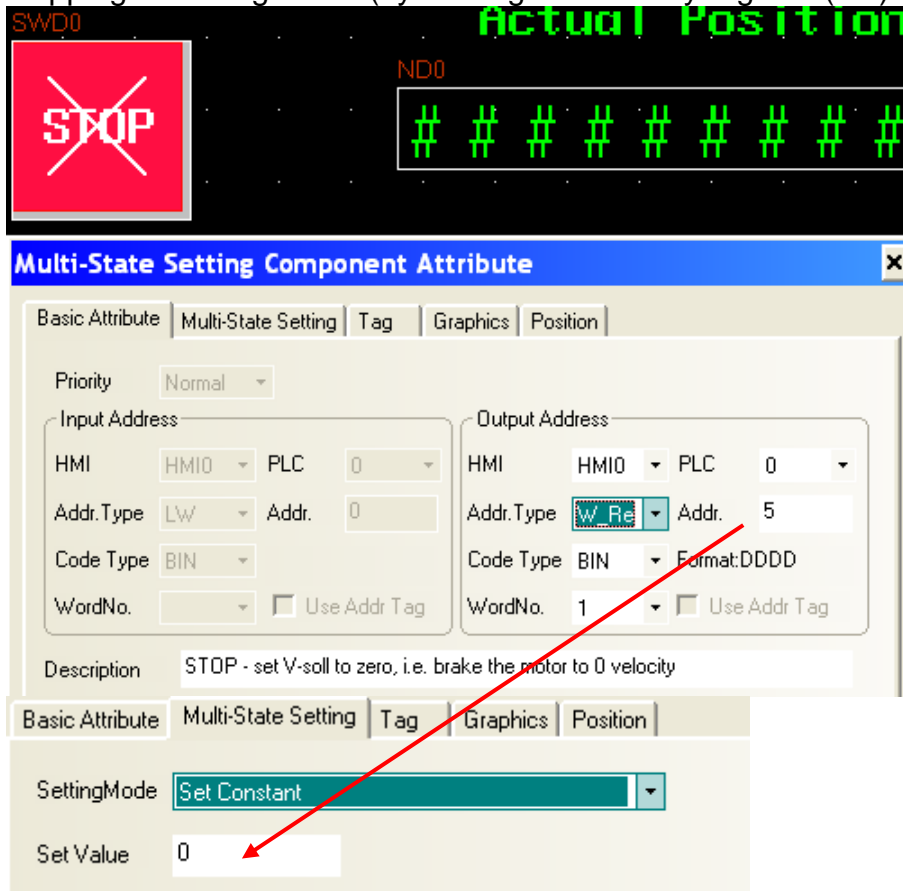



Basic Attribute | Multi-State Setting | Tag | Graphics | Position

Use Tag Language Danish  Use Text Library

Tag List Text Library

State No.	Content	Align	Font Size	Font Color
0	STOP	Center	16	
1		Left	16	

Basic Attribute | Multi-State Setting | Tag | Graphics | Position

Use Vector Graphics

NUM\_CLOSE001.vg

Use Bitmap

Import Graphics

Graphics State 0

## MAC motor® + HMI-420T

NI1 Set Speed

# # # # #

NI1 Set Position

# # # # # # # # # # #

SWD0

ND0 Actual Position

# # # # # # # # # # #

Register Types in the HMI vs in the motor controllers can be seen below.

Whenever it is necessary you can limit the register values to either the full range shown below (taken from the MAC motor manual) or to lower values thus preventing the operator to key in values that leads to mechanical failure.

The screenshot displays several configuration windows for HMI components. The windows are titled 'Data Input Component Attribute' and 'Data Display Component Attribute'. Each window has tabs for 'Basic Attribute', 'Numeric Data', 'Trigger Address', 'Font', 'Graphics', and 'Position'. The 'Numeric Data' tab is active in all windows, showing settings for 'Data Type', 'Digits Above Decimal-Point', 'Digits Below Decimal-Point', 'Min. Value', 'Max. Value', 'Project Data Conversion', 'Pro. Min Value', and 'Pro. Max Value'. Red boxes highlight these settings in each window, and red lines connect them to the text on the left.

**Word:** 16 bit unsigned.  
Range: 0 ... 65535

**Integer:** 16 bit signed.  
Range: -32767 ... +32767

**LongInt:** 32 bit signed.  
Range: -2.147E9 ... +2.147E9


**Fixed4:** 16 bit signed fixed point.  
Range: -7.999756 ... +7.999756  
Unit: 1 / 4096.

**Fixed8:** 16 bit signed fixed point.  
Range: -127.996 ... 127.996  
Unit: 1 / 256



## 4. Save the Project and Download it to the HMI

In the File menu choose **Save All**.


Then in the Tools menu you need to **Compile** the project (Ctrl + F7) – check if there are no errors:

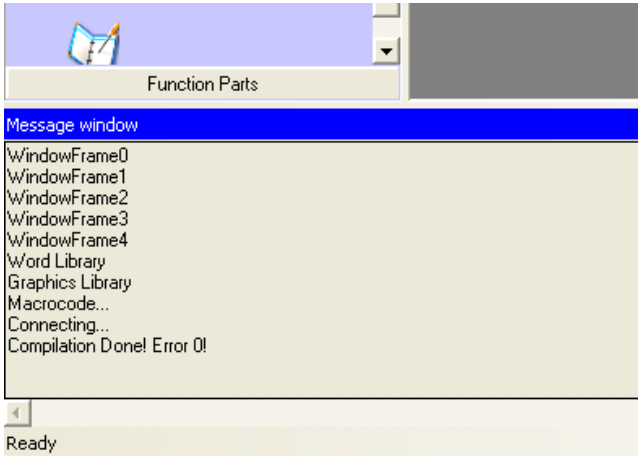


If you wish you can choose the **Offline Simulation** (F5 in the Tools menu), then click “Simulate”:

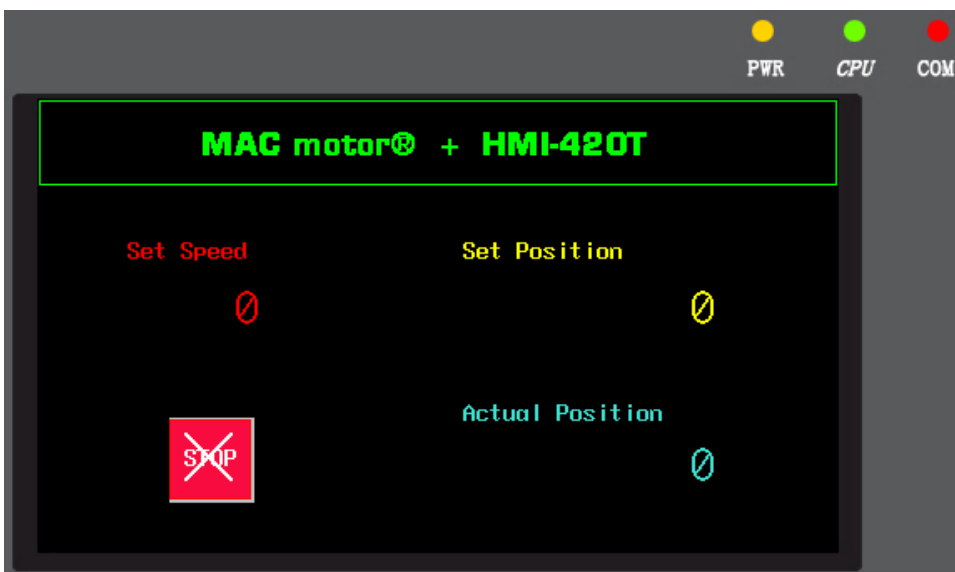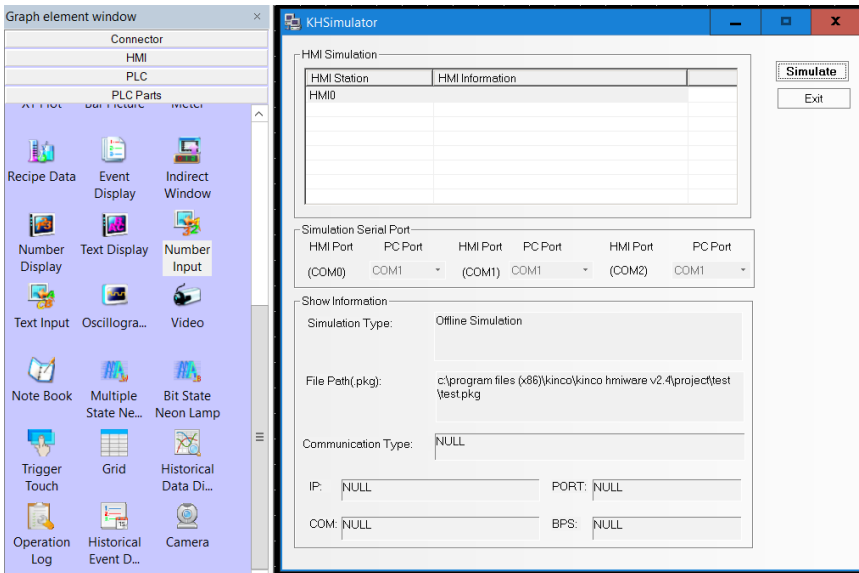

Test values can be keyed in using the mouse. Click the desired value and a keypad similar to the real pop-up keypad in the HMI will appear and you can now use the mouse to click the number buttons and finally clicking ENT (Enter):

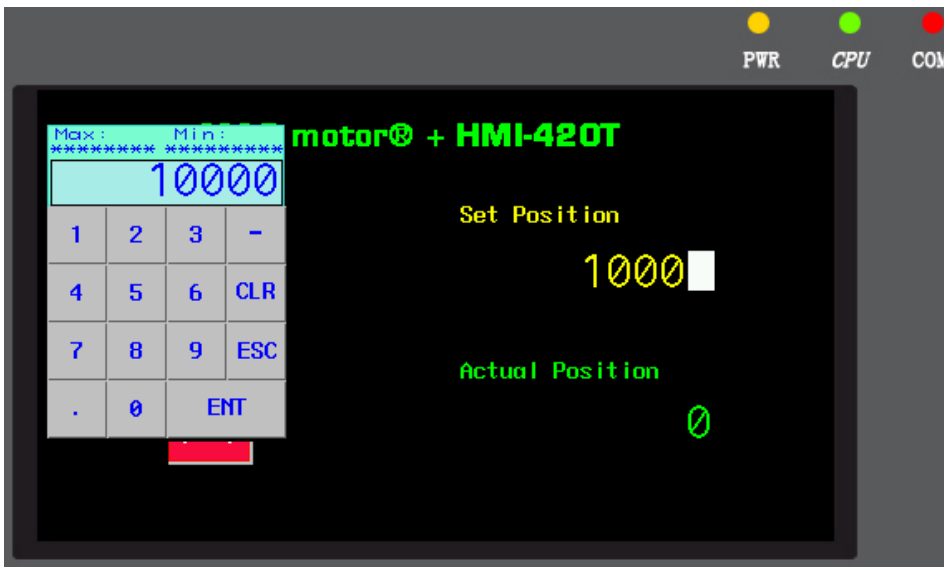

Finally you just need to **Download** the project to the HMI from the Tools menu (Ctrl + D), then click the Download button and watch the HMI screen.

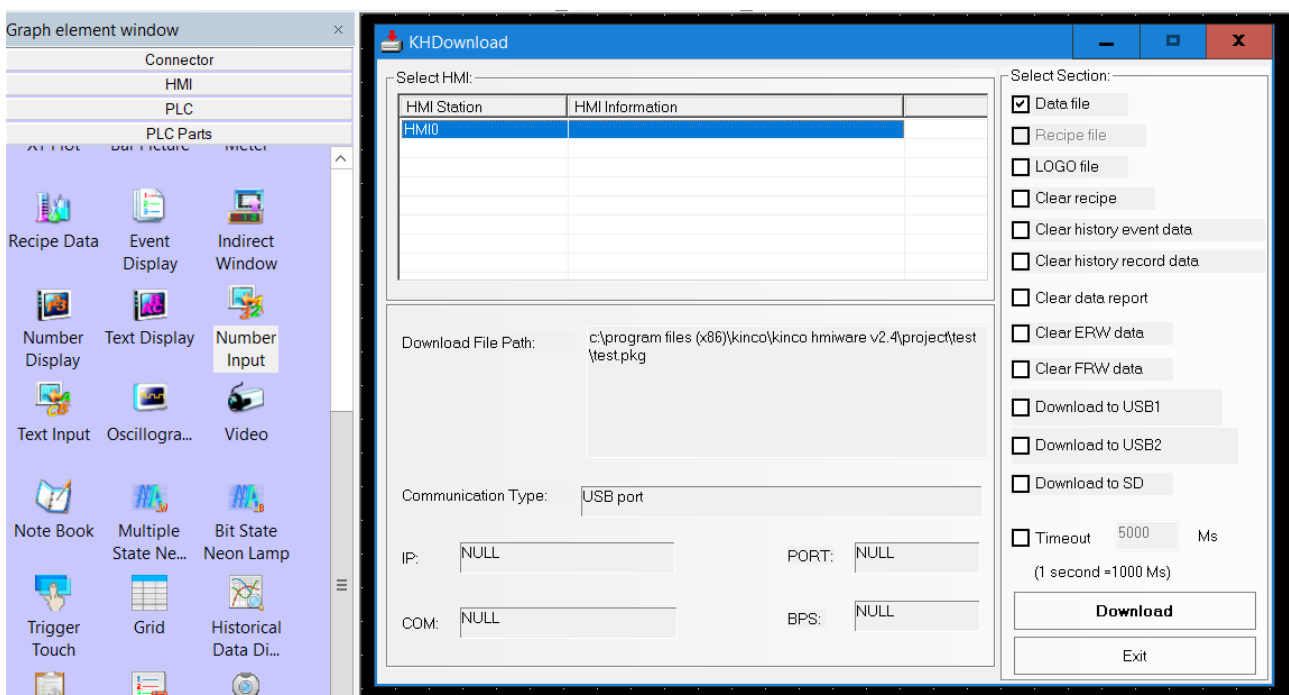

***Congratulations - you have now finished your first project !***