



# Cable to MAC/MIS with Ethernet

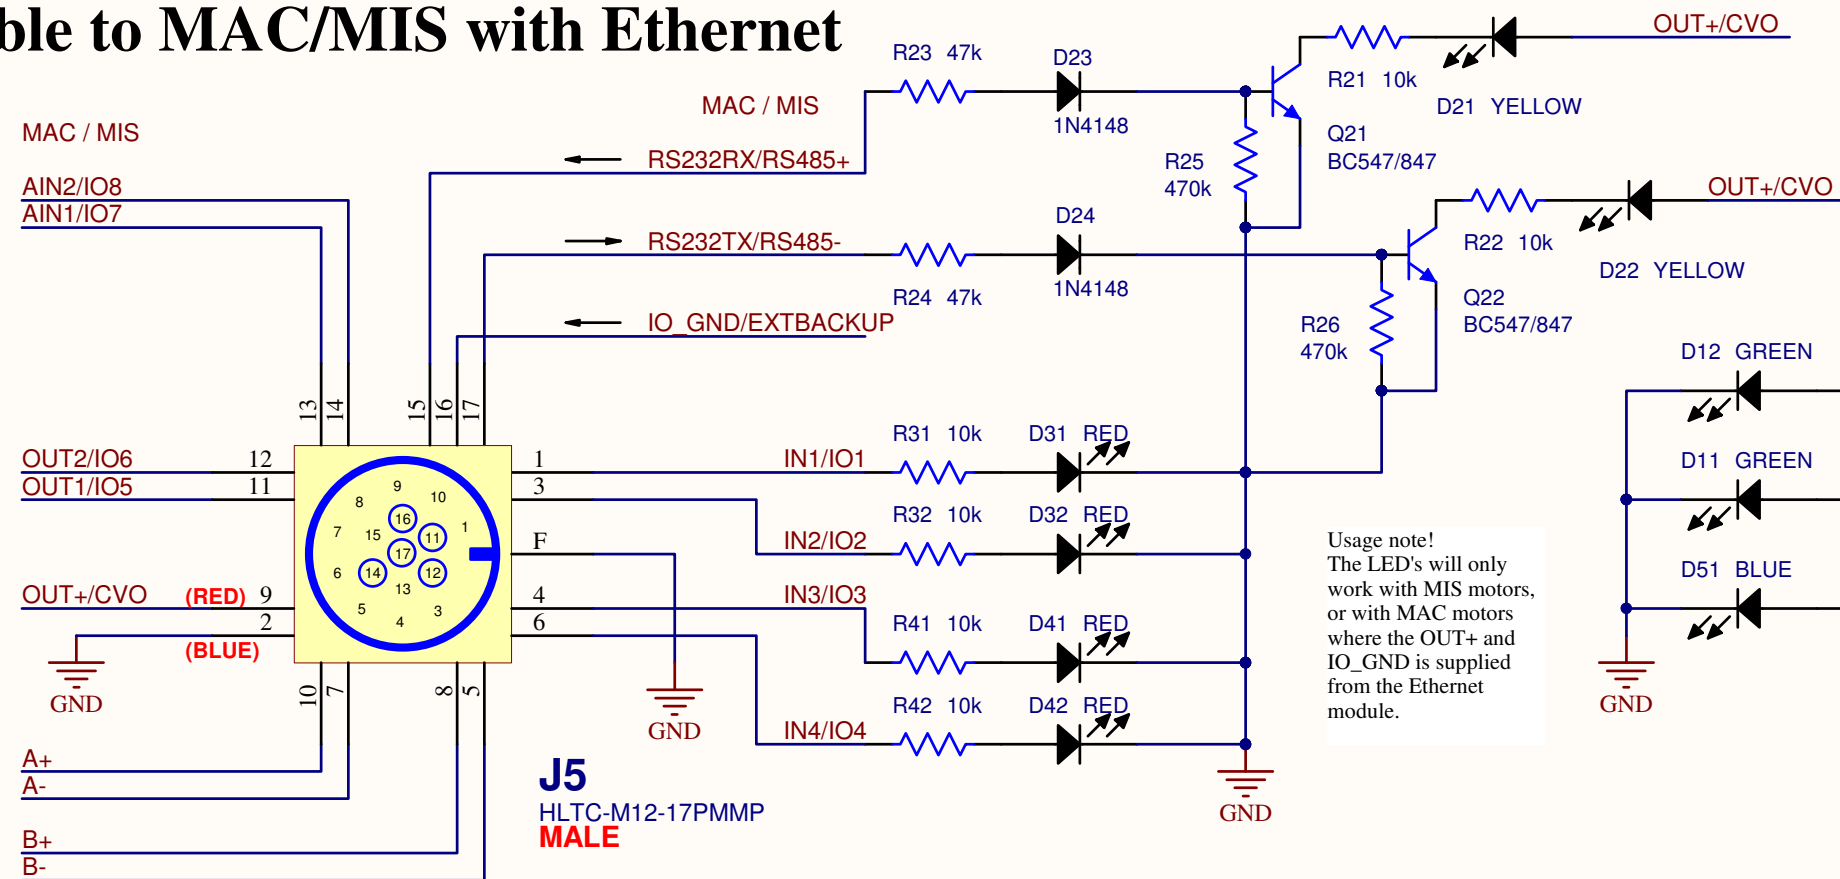


Usage note!  
The LED's will only work with MIS motors, or with MAC motors where the OUT+ and IO\_GND is supplied from the Ethernet module.

# PASS-THROUGH

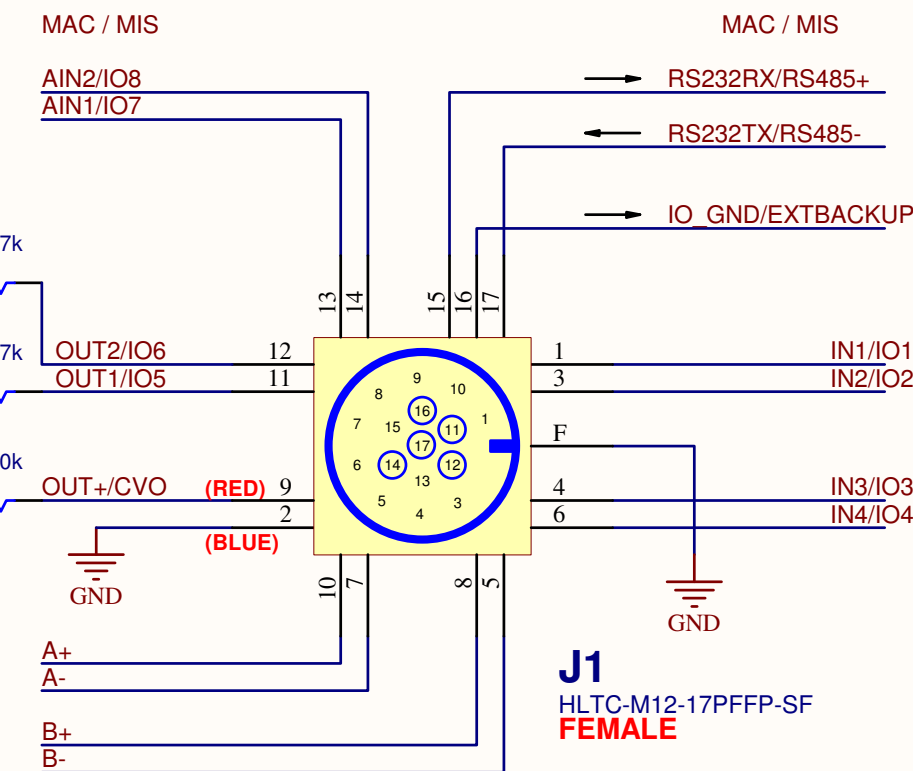


Usage note!  
If cable is connected to J1 the communication pins and GND must be properly connected to valid signals (pins 2,15,17). AND J2 must not be used. In other words use EITHER J1 OR J2. Not both.


# COM (MacTalk)

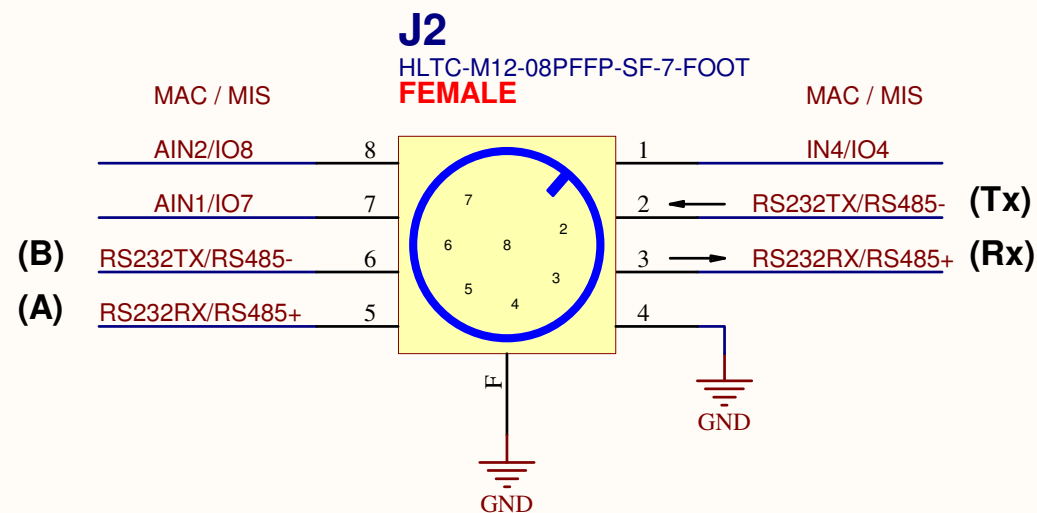


# I/O 1

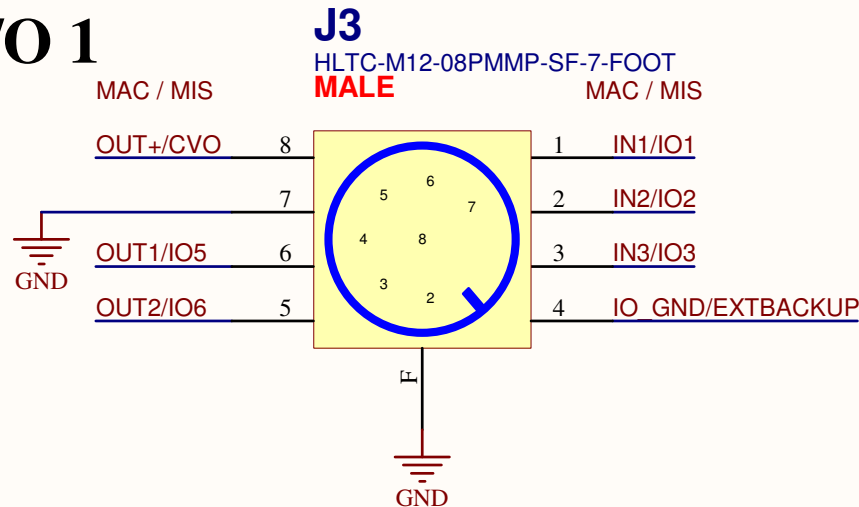

# I/O 2

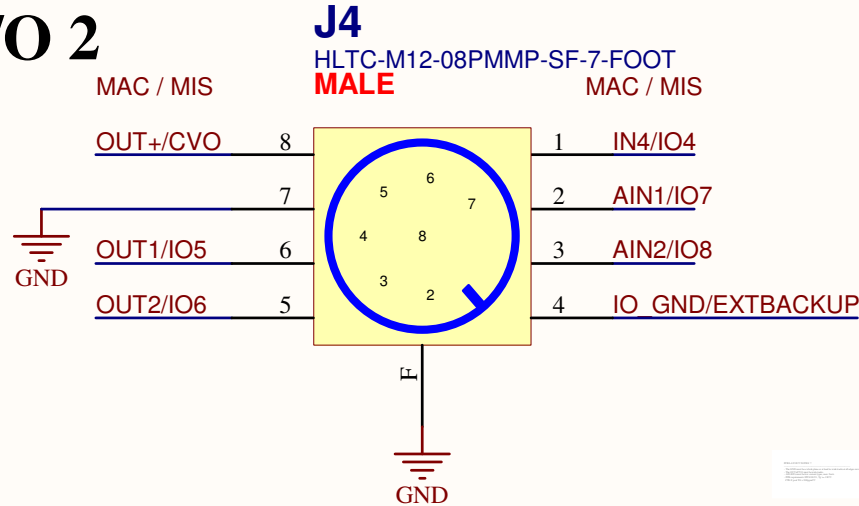

# 4 port distribution box

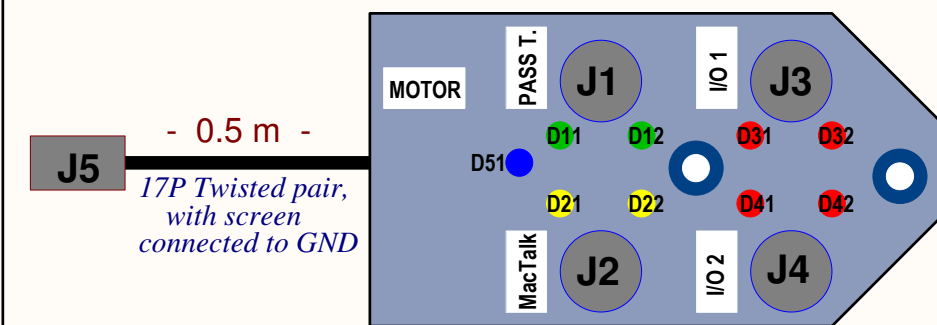

Title			<b>LocalIobox.PrjPcb</b>		
Size	Number	Revision			
A4	<b>PA0190</b>	1.1			
Date:	12/3/2013	Sheet of			
File:	K:\JVL\LocalIobox.SchDoc	Drawn By:	KB		